

Installation Instructions

Móz Tides - Ocean Waves System




Ocean Waves is a complete engineered, easy-to-install system consisting of varying widths of decorated and rolled 32-inch and 44-inch panels that are attached to the wall using a steel Snap Bar system. Ask about other products available in the MóZ Tides System.

Each Ocean Waves Kit includes:

- A MT100 End Snap Bars (2)
- B MT110 Mid Snap Bars (varies per order)
- C Drywall Anchors with Fasteners- (number varies per order)
- D Ocean Waves Panels - Ins and Outs

Additional tools needed for installation:


- E Stud finder
- F 4 foot long (or longer) level
- G Tape measure
- H Pencil
- I Electric drill
- J Ladder or lift device

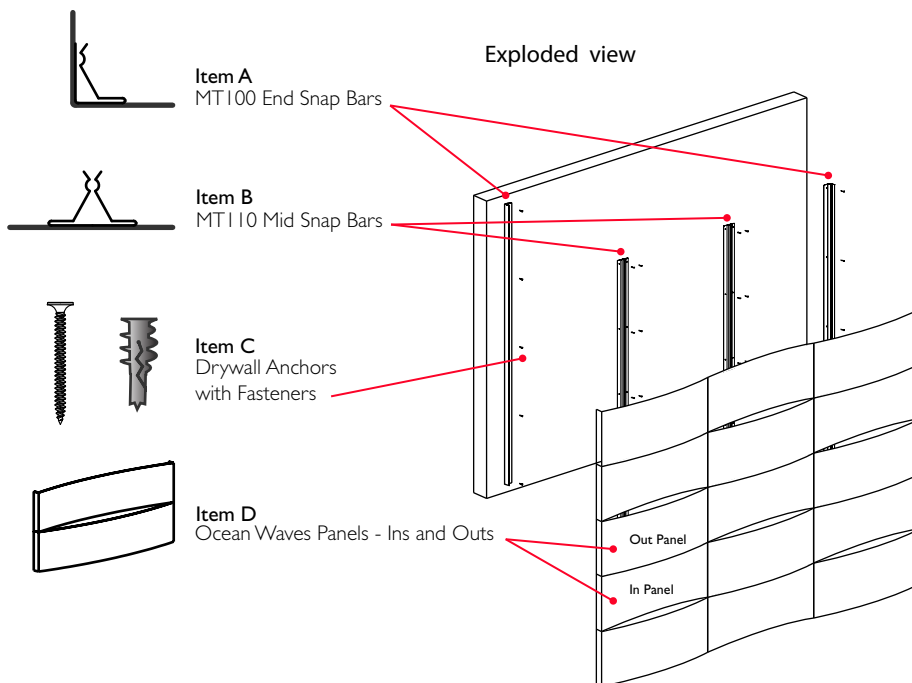

1 Using stud finder examine substrate and check for studs.



2 Layout and mark holes for the first End Snap Bar, making sure it is plumb. All further dimensions rely on the first bar.

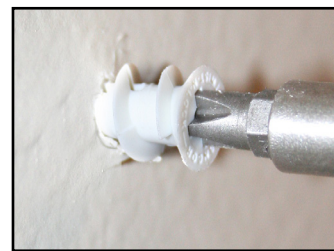

3 Set drywall anchor for screws if needed.



4 Anchor first Snap Bar and set second Bar parallel to the first and so on with the remaining Snap Bars.



5 Position and snap panels into the Snap Bars starting with one corner.



6 After all panels are snapped in assembly is complete.

For complete technical information, detailed drawings, installation information or other technical information, please call (510) 632-0853 or visit mozdesigns.com/spec_library.html.

For more information on other products and custom options from MóZ Designs, please contact us at (510) 632-0853.

In case of damage to any of the panels, simply contact a sales representative at (510) 632-0853 to obtain a replacement. Replacement charges may apply.