## Installation Instructions


Móz Art - Contemporary Metal Art




Congratulations on purchasing an original work of metal art from Móz Designs. Móz Art is an easy-to-install art piece consisting of I/8-inch aluminum (framed or unframed) that is attached to the wall using a Z-Clip system.

Your Móz Art piece is packaged with:


- (I) ea. Pre-drilled Z-clip Bracket. This bracket attaches to the wall. If your wall has significant bow in or out you may have to shim the Z-clip bracket straight to accommodate the art channel.
- (4) ea. Drywall Screws. These are for use in drywall only, in the event a stud or wood backing is not available at the hanging location, please purchase applicable fasteners.

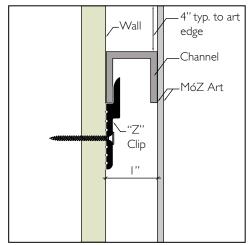

1 Your Móz Art piece is fabricated with an integral channel on the back so you can hang your art horizontally or vertically on the Z-clip bracket provided.

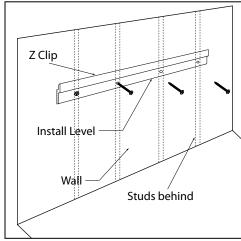

Attach the Z-clip bracket to the wall. Measure your intended hanging location, mark the hole locations, and screw the Z-clip bracket to the wall.

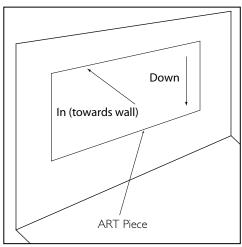

3 Place art piece on wall centered on and slightly above the Z-clip. Now gently pull down on the art piece (continuing to put pressure against the wall) until the back channel firmly seats in the Z-clip.

- Step I) Determine the orientation that the Móz Art piece will be hung i.e. vertical or horizontal. Position the Z-clip in the desired location, ensuring it is level, with the top of the clip 4-5/8" below the desired finish height of the art piece. Keep in mind that you need at minimum a 1/2" clearance above the finish height to accommodate the 3/8" lift required for the clip system.
- Step 2) Mark hole locations if necessary and secure the Z-clip to the wall with fasteners suited to your substrate. If no studs are available at the attachment site use the supplied drywall anchors and screws.
- Step 3) Place art piece with the back channel centered on, slightly above the Z-clip and firmly against the wall. Now gently pull down on the art piece (continuing to put pressure against the wall) until the back channel firmly seats in the Z-clip.

For complete technical information, detailed drawings, installation information or other technical information, please call (510) 632-0853 or visit mozdesigns.com/spec\_library.html.

For more information on other products and custom options from Móz Designs, please contact us at (510) 632-0853.