



Móz Wall Panel System - Terrace


Installation Instructions

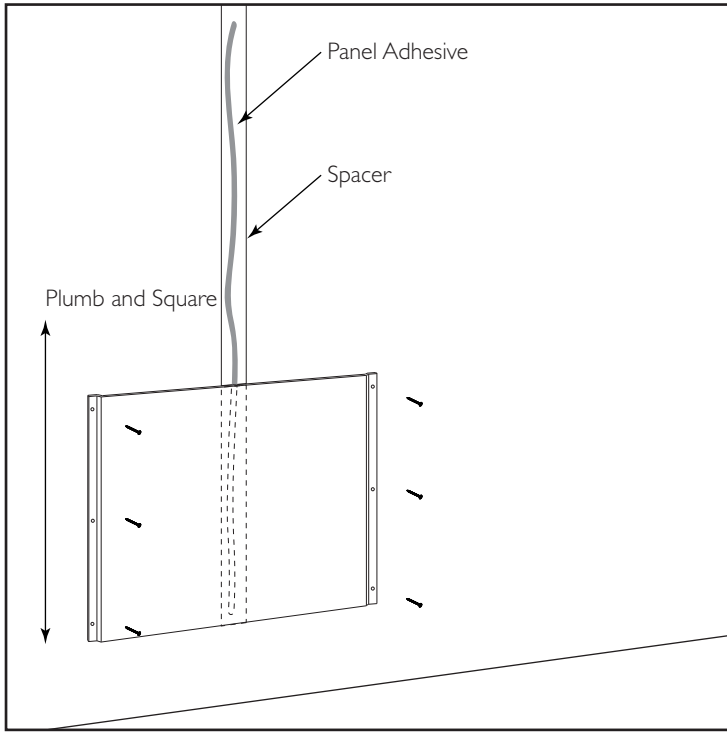


A. Locate starting point and install the first panel, Plumb and true using screws. Spacer is applied with panel adhesive (both sides).

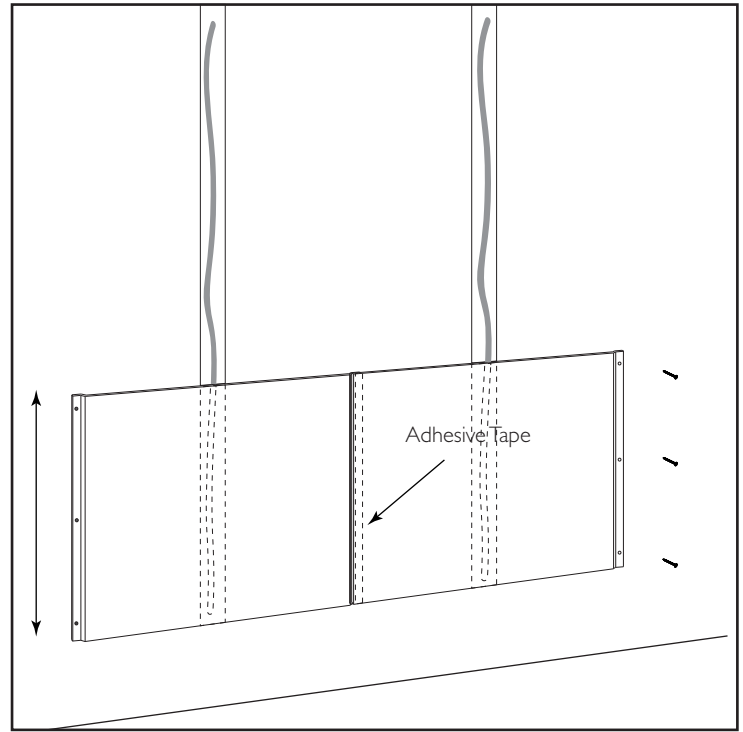

B. Align the next panel with the first and install it square and true using adhesive tape and screws.

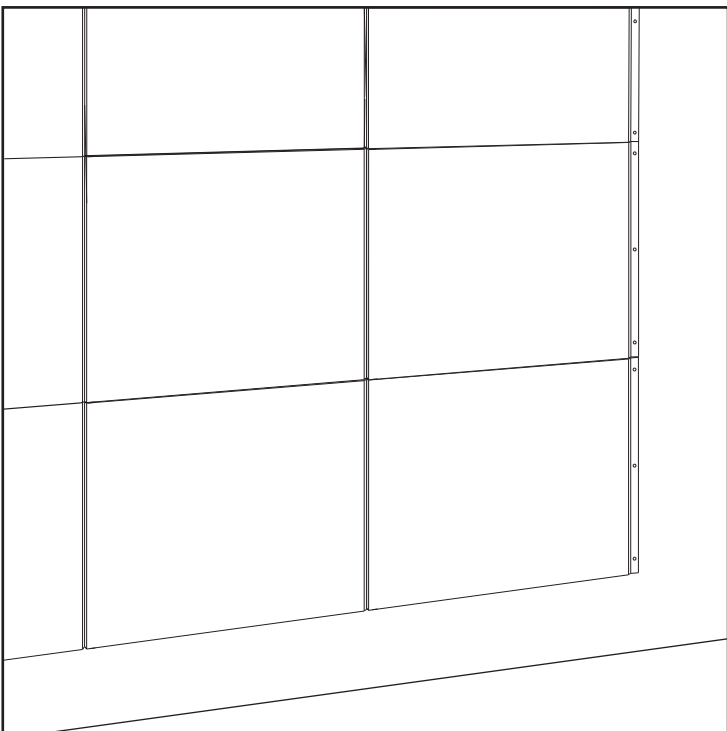

C. Continue installing the panels using adhesive tape and screws until all panels are installed. Apply spacers as you go.

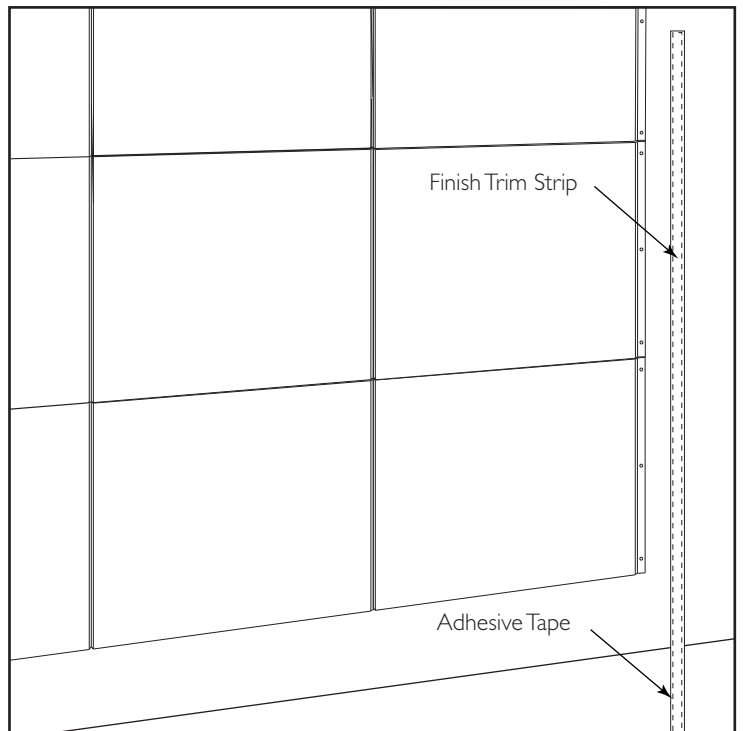

D. Complete the installation by applying finish trim strips at starting and ending panels using adhesive tape.